



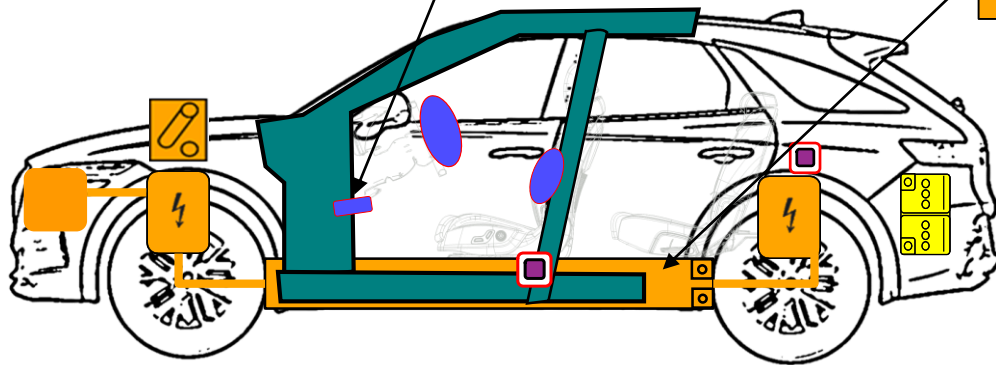

**Genesis GV70**  
SUV, 5 doors  
From November 2021

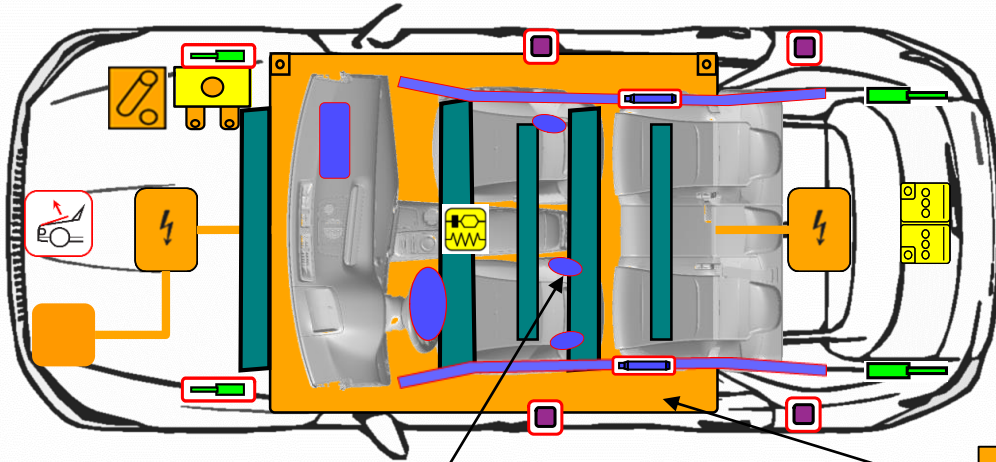

Reserved for holes (paper version)

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		High voltage component
	Battery low-voltage		Ultra-capacitor, low voltage		Fuel tank		Gas tank		Safety value
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage ultra capacitor

## 1. Identification / recognition

Brand Emblem



Charging door



GV70


Car Name



## 2. Immobilisation / stabilisation / lifting

### ■ Immobilisation

1

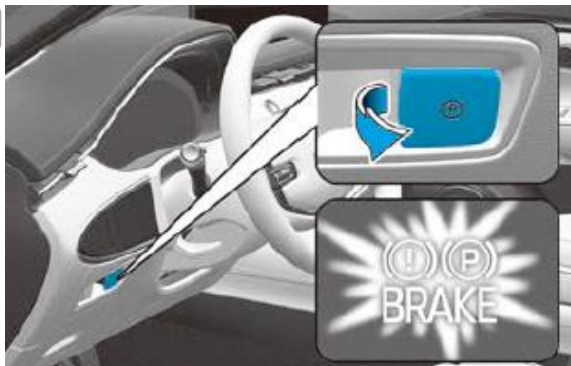



1. Chock the wheels and pull the switch to set the parking brake.

2




2. For automatic vehicles the shift lever to the park (P) position.

### ■ Lifting points under the vehicle:

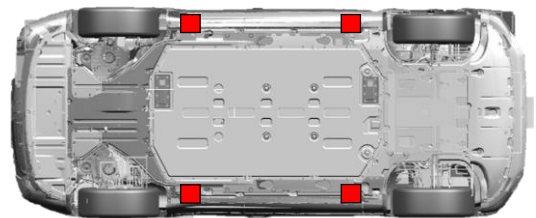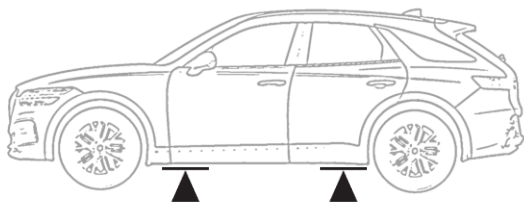

## 3. Disable direct hazards / safety regulations


### ■ Access to the battery

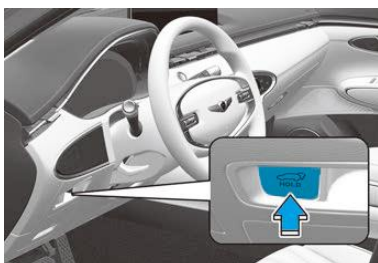

or



1. Press and hold the tailgate open button

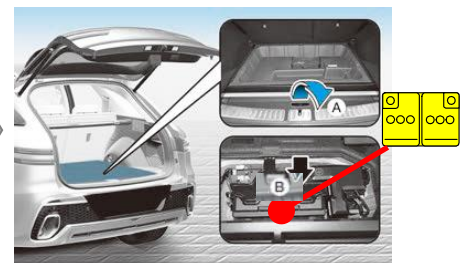

2. remove the clip (A) and release the cover (B)

## Disabling procedure

### Low voltage battery

① Turn the ignition switch off



② Disconnect the negative(-) terminal

③ Disconnect the positive(+) terminal

### High voltage battery

① Open cover of the fuse box in the PE compartment



② Pull up the yellow lever in the high voltage cut-off switch




OJKEVQ011046

## 4. Access to the occupants

### Seat adjustment



### Steering column adjustment

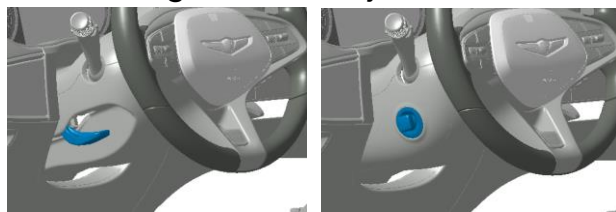


### Glass







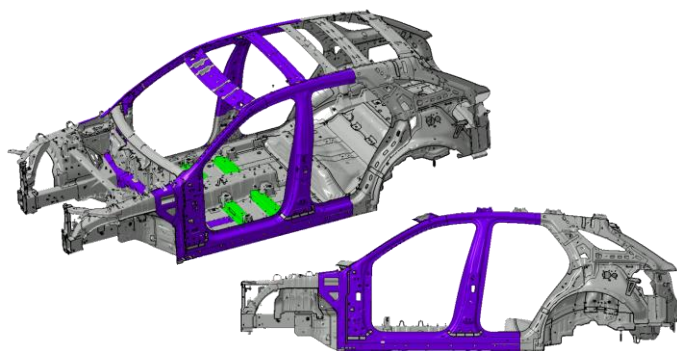


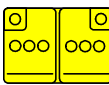











1-2 : Laminated / 3 : Tempered, Laminated(OPT) / 4-5 : Tempered

### Vehicle Body

Hardened Steel(100K↑)



## 5. Stored energy / liquids / gases / solids

	697V	     						
	12V	     						
	<table border="1"> <tbody> <tr> <td></td> <td>with heat pump</td> </tr> <tr> <td>R-134a</td> <td>900g</td> </tr> <tr> <td>R-1234yf</td> <td>900g</td> </tr> </tbody> </table>		with heat pump	R-134a	900g	R-1234yf	900g	   
	with heat pump							
R-134a	900g							
R-1234yf	900g							



 
When coolant leaks from the battery pack, it can become unstable with risk of thermal runaway. Check battery pack temperature with thermal imaging camera.



## 6. In case of fire




Use large amount of water



**BATTERY RE-IGNITION!**

### ■ Gas Strut / Preloaded spring / Pedestrian protection active system

Risk of missile effect of hood and tailgate.

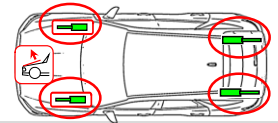


## 7. In case of submersion



Do not touch any of the high-voltage components or cables including the high voltage cut-off switch, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled out of the water.

## 8. Towing / transportation / storage

 OK:



Location front hook Location rear hook



Not OK:



**STORE AT SAFE DISTANCE FROM OTHER VEHICLES!**

## 10. Explanation of pictograms used

	Electric vehicle		Warning, Electricity
	General warning sign		Flammable
	Corrosives		Hazardous to the human health
	Explosive		Acute toxicity
	Air-conditioning component		Warning; low temperature
	Use thermal Infrared camera		Use water to extinguish the fire
	Bonnet		