




**Genesis G80**  
Sedan, 4 doors  
From March 2020

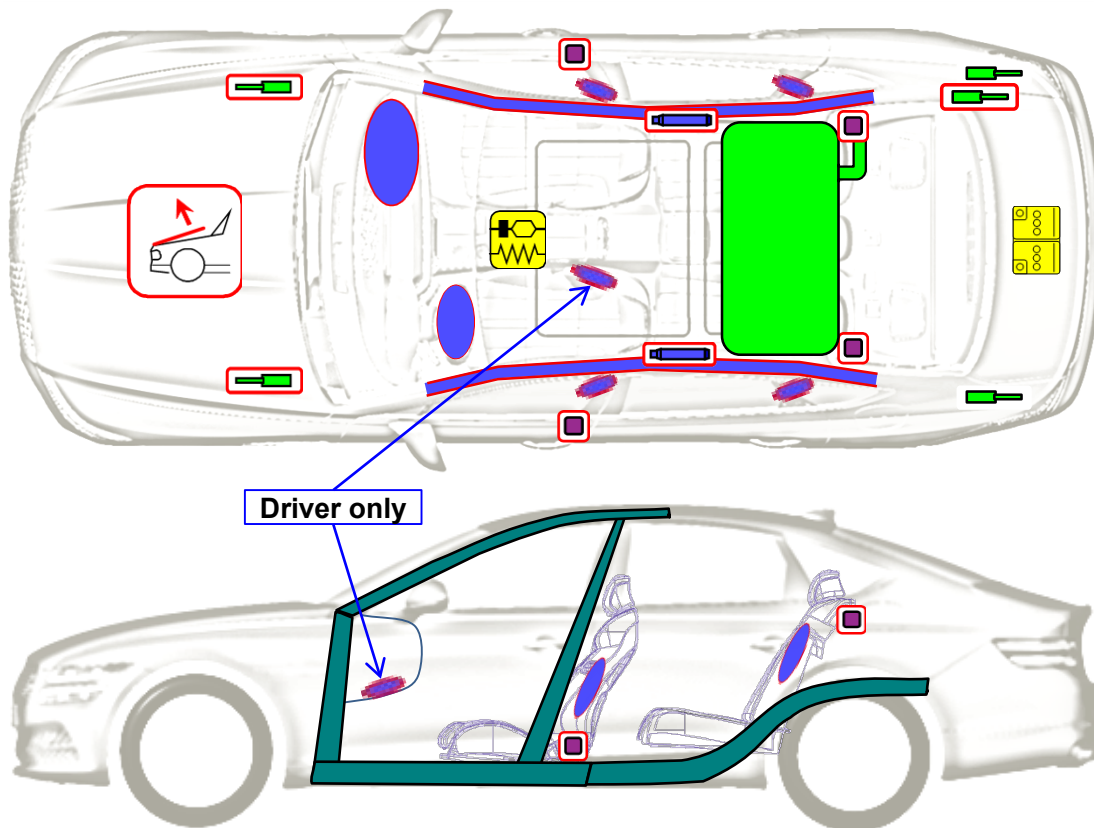


Driver only

Reserved for holes (paper version)

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack		High voltage power cable/ component		High voltage disconnect		Fuse box disabling high voltage system		Ultra capacitor, high voltage

	ID No.	Version No.	Version date	Page
	KMT-RG3-RSI-03-202101	03	01/2021	1 of 4

# 1. Identification / recognition

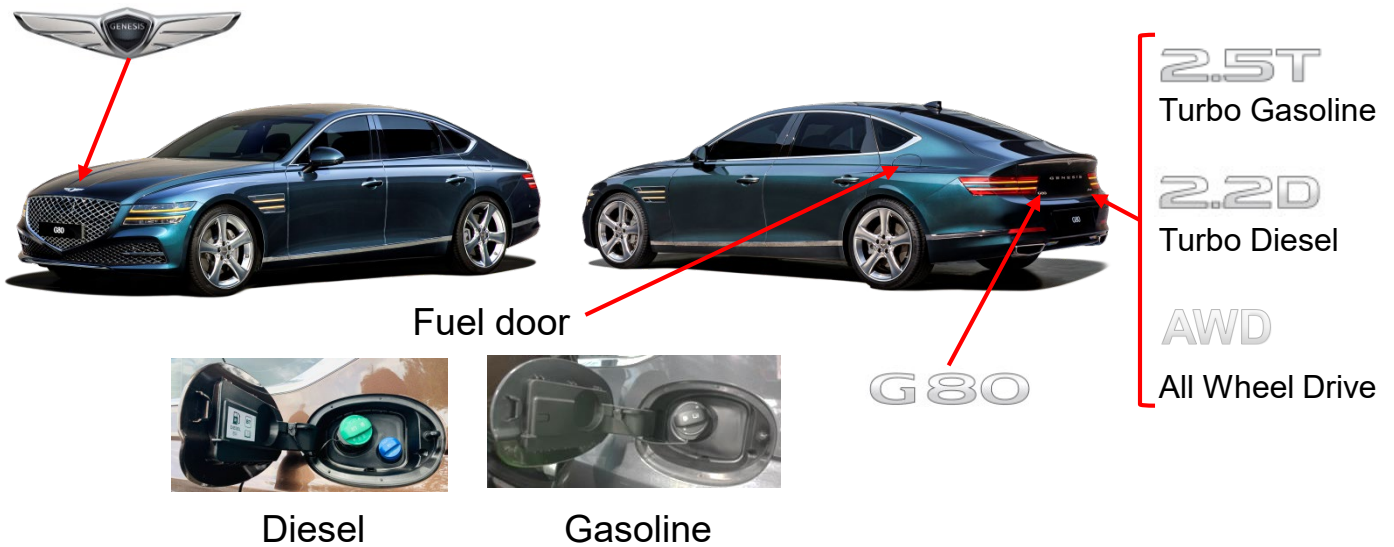


# 2. Immobilisation / stabilisation / lifting

## ■ Immobilisation




1. Chock the wheels and pull the switch to set the parking brake.

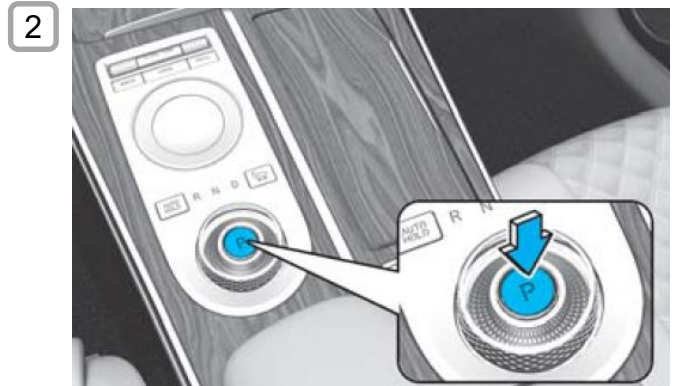

2. For automatic transmission vehicles, shift into park(P) gear.

## ■ Lifting positions at car underbody: ●

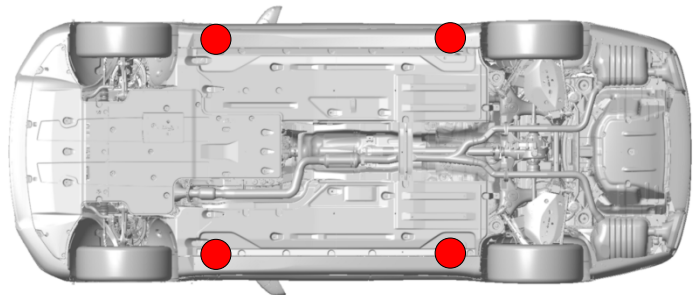

	ID No.	Version No.	Version date	Page
	KMT-RG3-RSI-03-202101	03	01/2021	2 of 4

### 3. Disable direct hazards / safety regulations

#### ■ Access to the battery



1. Press and hold the trunk open button located on the instrument panel to open the power trunk.

OR



1. Press the trunk open button located outside the trunk while carrying the smart key to open the power trunk.



2. To access the battery, remove the clip (A) and release the cover (B).

#### ■ Disabling procedure




- 1) Switch off the ignition
- 2) Disconnect the negative terminal (-)
- 3) Disconnect the positive terminal (+)


### 4. Access to the occupants

Glazing:

- 1 : Laminated
- 2+3: Tempered (Standard)  
Laminated (Optional)
- 4+5: Tempered

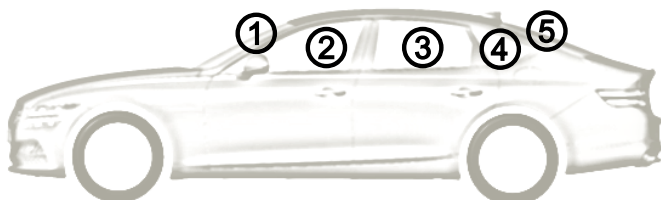

Hardened Steel:

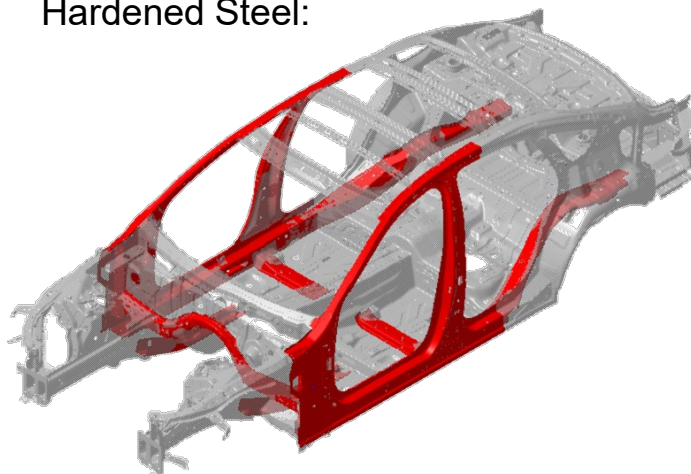

### 5. Stored energy / liquids / gases / solids

#### ■ Fuel Tank

65ℓ

65ℓ

#### ■ Battery



12 V

ID No.

KMT-RG3-RSI-03-202101

Version No.

03

Version date

01/2021


Page

2 of 4

## 6. In case of fire


Gas Strut

→ Risk of missile effect

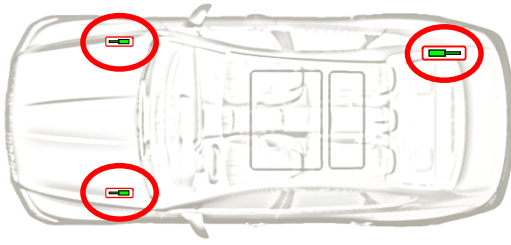



Pedestrian protection active system

→ Pyrotechnical actuators

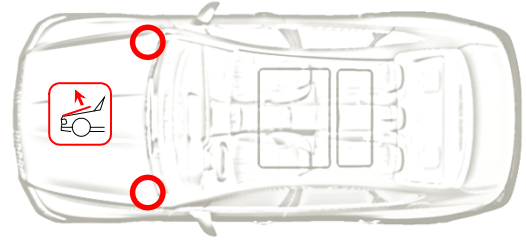


## 8. Towing / transportation / storage

**OK :**

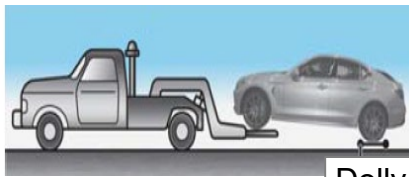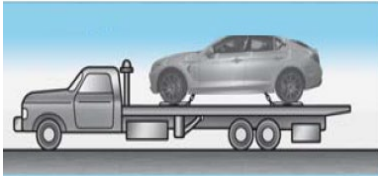

Notice: AWD (All Wheel Drive) vehicle must be towed with all wheels off the ground, either on a flatbed tow truck or using dollies.

**Not OK :**

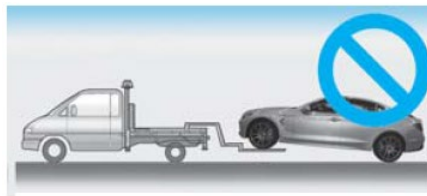

Notice :

Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment.  
Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.

	ID No.	Version No.	Version date	Page
	KMT-RG3-RSI-03-202101	03	01/2021	2 of 4