




## **Genesis G90**

Sedan, 4 door From October 2023







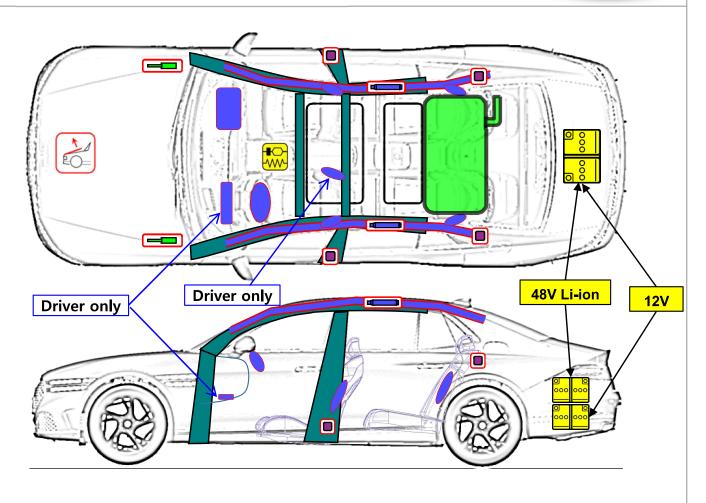

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit	(C)=	Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention	4	High voltage component
000 000	Battery low- voltage	HH	Ultra-capacitor, low voltage		Fuel tank		Gas tank		Safety value
	Battery pack, high-voltage	2	High voltage power cable	<i>?</i> 。	High voltage device that disconnects high voltage	0	Fuse box disabling high voltage	<del>     </del>	High voltage ultra capacitor

ID No. KTM-RS4-3-RSI-01-202303 Version No. 01

Version date: 05/2023

Page 1 of 4

## 1. Identification / recognition



#### **Notice:**


Model variant with long wheel base exist.

No optical changes, just longer!

## 2. Immobilisation / stabilisation / lifting



- 1. Chock the wheels and pull the switch
- to set the parking brake.

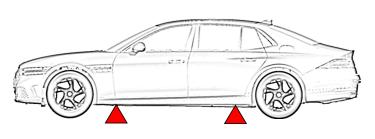


2



All Wheel Drive

2. For automatic vehicles, push the P (park) button to select the P (park) position.

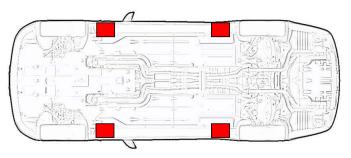

## 3. Disable direct hazards / safety regulations



 


#### Access:










button while carrying smart key


Disabling:

 
Wait 10min and get access to the 48V battery shown above






Remove the luggage cover and foam

 

 

Disconnect 48V cable (C)

Disconnect the BMS EXTN wire (D)

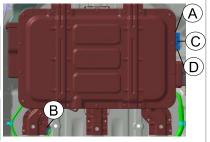

ID No. KTM-RS4-3-RSI-01-202303 Version No. 01

Version date: 05/2023

Page 2 of 4

### 12V Battery:



Access:



12V battery is located under the 48V battery.



Disassemble the 5 bolts(M12) of each Red Circle position.



You can find 12V battery after disassemble 48V battery (upper procedure)

### Disabling:



Turn the ignition switch off



Access to battery shown above




Disconnect the negative(-) terminal




Disconnect the positve(+) terminal

## 4. Access to the occupants

## Steering column adjustment:

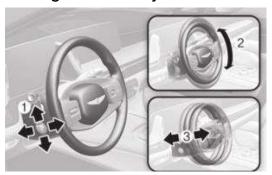

### Glass:

 

## Seat adjustment:




Vehicle body:

- Laminated
  Laminated
- 3) Laminated
- 4) Laminated5) Laminated



## 5. Stored energy / liquids / gases / solids



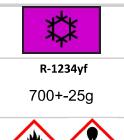







WHEN COOLANT LEAKS FROM THE BATTERY PACK, IT CAN BECOME UNSTABLE WITH RISK OF THERMAL RUNAWAY. CHECK BATTERY PACK TEMPERATURE WITH THERMAL IMAGING CAMERA

ID No.	Version No.	Version date:	Page
KTM-RS4-3-RSI-01-202303	01	05/2023	3 of 4

#### 6. In case of fire



#### **BATTERY RE-IGNITION!**





#### Gas strut!




Risk of missile effect of hood.





# **Pedestrian protection active system** → Pyrotechnical actuators



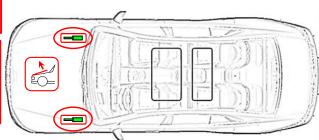

#### 7. In case of submersion




Do not touch any of the 48V components or cables, as doing so poses an electrocution hazard. Work on the vehicle only after the vehicle has been pulled, out of the water.



## 8. Towing / transportation / storage



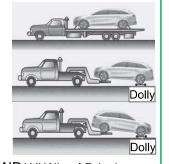


Notice: AWD(All Wheel Drive) vehicle must be towed with all wheels off the ground, either on a flatbed tow truck or using dollies.

#### **Not OK**



 Notice: Do not tow with slingtype equipment (1). Do not tow the vehicle with the front wheels on the ground as this may cause damage to the vehicle (2).





STORE AT SAFE DISTANCE FROM OTHER VEHICLES!

## 10. Explanation of pictograms used

B	Gasoline vehicle		Fuel tank content gasoline/ethanol		Bonnet
	General warning sign	*	Air-conditioning component		Boot
	Corrosives		Hazardous to the human health		Flammable
	Explosive		Acute toxicity	*	Environmental hazard
	Use thermal Infrared camera		Pedestrian protection active system		

Version No. Version date: ID No. Page 4 of 4 KTM-RS4-3-RSI-01-202303 01 05/2023