

Genesis GV70


SUV, 4 doors From March 2021











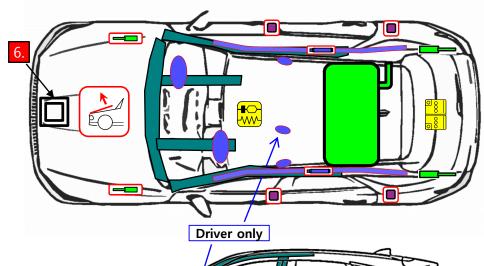

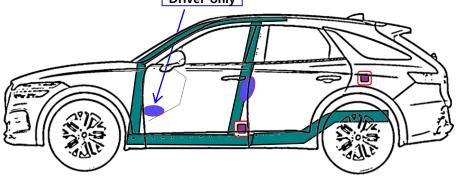

	Airbag		Stored gas inflator		Seat belt pretensioner	♣	SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut/ Preloaded spring		High strength zone		Zone requiring special attention		
000 000	Battery low voltage	HH	Ultra capacitor, low voltage		Fuel tank		Gas tank		Safety valve
	High voltage battery pack	7	High voltage power cable/ component	%	High voltage disconnect	0	Fuse box disabling high voltage system	4	Ultra capacitor, high voltage
		ID No.		Version No.		Version date		Page	
		KMT-JK1-RSI-01-202102		01		02/2021		1 of 4	

1. Identification / recognition

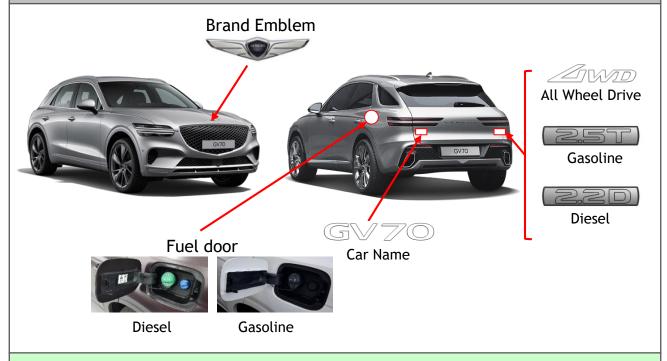

2. Immobilisation / stabilisation / lifting

■ Immobilization





1. Chock the wheels and pull the switch to set the parking brake.



2. For automatic vehicles the shift lever to the park(P) position.

■ Lifting points under the vehicle:■





ID No.		Version date	Page
KMT-JK1-RSI-01-202102	01	02/2021	2 of 4

3. Disable direct hazards / safety regulations

■ Access to the battery





open button located on the instrument panel to open the power tailgate.



1. Press and hold the tailgate 1. Press the tailgate open button located outside the tailgate while carrying the smart key to open the power tailgate.



2. To access the battery, remove the clip (A) and release the cover (B).

■ Disabling procedure



1 Turn the ignition switch off



(2) Disconnect the negative(-) terminal



(3) Disconnect the positive(+) terminal

4. Access to the occupants


■ Glass

1-2: Laminated

3: Tempered, Laminated(OPT)

4-5: Tempered



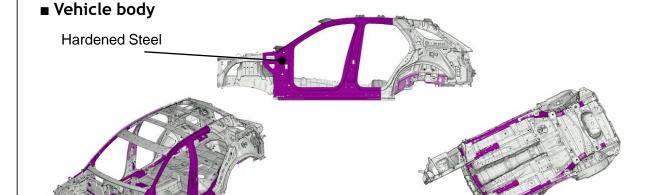

ID No.		Version No.	Version date	Page
	KMT-JK1-RSI-01-202102	01	02/2021	3 of 4

5. Stored energy / liquids / gases / solids

■ Fuel Tank

66ł

66l


■ Battery

000 000


12 V

6. In case of fire

- **■**Gas Strut
- → Risk of missile effect



- ■Pedestrian protection active system
- → Pyrotechnical actuator



8. Towing / transportation / storage

OK:







Notice:

A towed AWD (All Wheel Drive) vehicle must have all its wheels off the ground. Keep it on a flatbed tow truck or use dollies

Not OK:





Notice:

Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment. Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.

ID No.	Version No.	Version date	Page
KMT-JK1-RSI-01-202102	01	02/2021	4 of 4